

# Index

---

## A

- Abbreviations 2-7
- AC 90-100 RNAV 2-2
- Acronyms 2-7
- Activate 5-2, 6-7, 6-21
  - Button Function 2-30
  - Menu Function 2-30
  - Missed Approach 6-56
  - Phantom Waypoint 3-139
- Active Leg 3-104
- ADAHRS 2-7
- ADC
  - Failure 3-150
- ADF 3-83
  - Bearing Input 2-43
- ADS-B Datalink 6-96, 6-97, 6-98
- Advisory 2-16, 3-17
- AGL 3-11
- AHRS 2-2, 2-7
  - Failure 2-46, 3-151, 3-153
- Aircraft
  - Position 3-89
- Airport
  - Active Waypoint 8-3
  - Advisory 9-10
  - Departure Information 6-37
  - IFR 3-7
  - Nearest 6-16, 6-18
  - Runway Diagram 3-90
  - VFR 3-7
- Airspace 3-78
  - Markings 3-91
- Airspeed
  - Display 3-31
  - Indicated Readout 3-3
  - Tape 3-3
  - Target 6-73
  - TAS 3-115
  - True 3-78, 3-135
- AIU 6-106
  - Autopilot 2-43
- Alert
  - FLTA 9-23
  - Too Low Gear 9-28
- Altimeter 7-2
  - Setting 3-3, 3-11, 6-1
- Altitude 3-88
  - Above Ground 3-3
  - AGL 9-34
  - Capture Predictor 3-88
  - Crossing 8-23
  - Density 3-78, 3-115
  - Desired 3-52
  - Hold 9-8
  - Minimum 3-40, 6-71
  - Minimum Setting 3-40
  - MSL 9-33
  - Radar 3-127
  - Readout 3-3, 3-12
  - Tape 3-3, 3-12
  - Target 3-47, 3-53
  - Target Bug 3-47

- Analog
  - Roll Steering 6–106
- Angle
  - Bank 3–51–3–60
- Annunciation 2–16
  - Display 9–4
- Annunciator
  - Battery Bus 9–5
- Annunciators 9–5
- Appendix 1–6, 9–1
- Approach
  - Activate Missed 8–35
  - Chart 8–9
  - Courseline 6–50
  - DPs and STARs 6–44
  - Entered 8–17
  - Final Course 3–36
  - Guidance 3–59
  - Holding Patterns 8–20
  - IFR 6–48
  - ILS 8–27
  - Instrument 3–64, 3–79, 3–104
  - Marker 9–50
  - Missed 8–1, 8–32
  - Missed Course 3–79
  - Missed Point 8–9
  - Mode 2–42
  - NAVDATA 9–51
  - Non-Precision 6–107, 8–9
  - Overview 8–1
  - Precision 6–107
  - Primary Reference 8–27
  - Prohibited 2–32
  - Vectors-To-Final 3–139
  - VFR 2–6, 6–45, 6–46
  - With DME Arcs 8–21
- APV 2–7
- ARC 6–85
- Arc
  - Format 6–85
  - Guidance 8–23
  - Intercept 8–22
- ARINC 2–43
- ARM 3–10
- Asterisk 3–135, 8–26
- ATC 2–7
- Attitude
  - Failure 9–2
  - Heading Reference 2–39
  - Indicator 2–39
  - Unusual Recovery Mode 3–6, 3–29
- Autopilot 6–106, 6–109, 9–8
  - Analog 6–106
  - Digital Interface 6–111
  - Digital Roll Steering 6–111
  - EFIS/AIU 9–6
  - HDG Mode 6–108
  - Heading Mode 9–7
  - Nav 6–110
  - Output Signals 2–43
  - Overrides 6–106
  - Wing Leveler 6–106
- Autorotation 9–35
- B**
- Bank 3–60
- Bank Angle Scale 3–3
- Barometric 2–31, 3–11
- Basic PFD mode 3–42
- Battery 2–4, 9–1
- Beacons
  - Non-Directional 9–41
- Bearing 3–14
  - To Waypoint 3–93
  - Values 9–39
- Bottom-of-Descent 3–88
- Brightness 2–30

- Bug
  - Decision Height 8–12
  - Heading 2–30, 6–67, 8–26
  - Target Airspeed 3–62
  - Target Altitude 6–69
  - Turn Off 6–75
- Button
  - Direct-To 7–2
  - INFO 6–24
  - OBS 6–61
  - SPD SEL 6–73
- C
  - Caution 2–16, 3–17, 6–70
    - Landing Gear 9–27
  - CDI 2–14, 3–3, 8–9
    - Needle 3–83
    - Scale 3–16, 3–83, 8–18
    - Scale Transition 8–26
    - Scaling 8–6
  - CDI/ANNUNCIATOR Source 6–59
  - Cell
    - Mode 6–92
  - Chart 2–32, 8–9, 8–19
    - Precedence 8–10
    - SID 9–40
    - STAR 9–40
  - Chelton
    - EFIS PFD 8–1
  - Clear 6–37
  - Climb 3–9, 3–21, 3–23
    - Aircraft Referenced 3–56
    - ANG 6–76
    - Angle 3–54, 8–39
    - Geo-Referenced 3–56
    - Performance 9–9
    - Top 3–88
  - CLR STRKS 6–93
  - Colors 9–15
  - EFIS 2–14
  - Compatibility 9–38
  - CONT 3–10
  - Controls 2–29
  - Coordinates 9–46
  - Count
    - Down 6–65
    - Up 6–64
  - Course
    - Deviation 3–60
    - Guidance 3–59
    - Interception 3–116
    - Leg 3–39
    - Reversal 2–42, 8–15
  - Courseline 3–30, 3–96
    - Arrow 3–83, 3–97
    - OBS 6–62
  - Crossfill 5–47
  - CRS SYNC 3–36
  - CWA 2–16
- D
  - Data
    - Card 2–32
    - Logging 9–52
  - Database 2–33
    - Coverage 7–1
    - Obstacle 3–41, 9–33
  - Datalink Weather Status 3–78
  - Datum
    - Course 2–43
    - Heading 2–43
  - DCLTR 3–48
  - Dead Reckoning 3–144–3–147
  - Dead-Stick Glide 3–97
  - Decision Height 6–50, 6–72, 8–27
  - Decision Height Bug 8–12
  - Declutter
    - MFD 5–47

- Moving Map 6–88
- Navigation 6–88
- PFD 6–89
- Defaults
  - Factory 6–88
- Density Altitude 3–98
- Departure 3–15
  - Airport 9–9
  - Information 9–9
  - Mode Level 9–20
  - Procedure 8–39
  - Route 8–38
- Descent
  - Excessive Rate 9–25
- Deviation 3–129, 6–70
  - Course Indicator 8–9
  - Dots 3–30
  - Excessive Downward 9–29
  - Flight Director Horizontal 2–43
  - Flight Director Vertical 2–43
- DH 6–71
- Direct-To 3–119, 3–139
- Discontinuity 3–139, 6–45, 8–8, 8–25
- Display
  - Controlling 6–81
  - Rotorcraft Symbolology 1–5
  - Symbology 1–5
  - Terrain 9–12
- Displays 2–29
- Distance 3–8, 9–21
  - Values 9–39
- DME 2–8, 3–7, 3–137
  - Arc 8–24
  - Arc Radius 9–50
  - Arcs 2–42
- Download
  - Log Files 9–52
  - Terrain 3–130
- DP 2–8, 8–38
- Limit 8–40
- E**
- EFIS
  - Colors 2–14
  - Master Switch 9–5
  - Mute 2–16, 9–6
- Elevation 3–11, 6–46
- Entry
  - Pattern 9–10
- Error
  - Course 2–43
- Expanded waterline 3–3, 3–6
- F**
- FAF 8–25, 8–26
- Failure
  - ADC 3–150
  - Airdata 9–3
  - Auxiliary Sensor 9–4
  - Component 3–145
  - Database 9–36
  - Electrical 9–1
  - GPS 3–146, 9–2
  - Heading 9–2
  - PFD 9–1
  - Power 9–5
  - Sensor 3–110
- Failure Modes
  - APPR 6–107
  - Enroute 8–23
- Fault Detection 8–1
- FD 6–89
- FDE 2–5, 2–41, 3–146
- Filtering
  - Rate 9–26
- Fix 3–7, 3–8, 3–99, 6–41
  - Airway 3–99
  - Final Approach 3–57, 6–55

- Intersection 3–80, 3–99
- Transition 6–24
- Types 9–48
- Flag
  - Advisory 2–16, 3–97
  - Caution 2–16, 3–97, 6–71, 6–72
  - Check Range 3–100
  - CWA 3–17, 3–129, 3–142
  - Glidescope Validity 2–43
  - GPS Caution 2–41, 9–3
  - GPS LOI 2–42
  - GPS LOI Caution 3–146
  - GPS LON Caution 3–146
  - HSI Source Advisory 3–132
  - Menu Lock 2–31
  - No Air Data 3–150
  - No Attitude 3–151, 3–153
  - No GPS 3–154
  - Radar Altimeter Altitude 2–43
  - Suspend 3–9, 3–138, 6–56, 8–16
  - Terminal 6–47, 6–51, 8–6
  - TOO LOW 9–28
  - Traffic Advisory 3–133
  - Warning 3–41
  - Yellow 3–69
- Flaps 9–13, 9–27
  - Too Low 9–28
- Flight
  - Aircraft Path Marker 3–21
  - Path Marker 3–3, 3–8
  - Plans 6–3
  - Rotorcraft Path Marker 3–24
- Flight Plan
  - Activate 3–119
  - Create 6–4
  - Delete 6–13
  - Edit 6–8
  - Info 6–6
  - NO SAVED 6–7
  - Reverse 6–11
  - Store 6–4
  - Unique Names 9–10
- FLTA 2–8, 3–124, 9–12, 9–17
  - Search Envelope 9–19
  - Search Volume 9–23
- Format
  - Arc 6–85, 6–92
  - Center 6–85
  - Centered 6–92
  - Conventional HSI/PTR 3–83
  - Data 9–53
  - North-Up 3–90
- FPL 6–4
- Frequency 6–105, 6–109, 8–26
  - ATIS 8–22
  - Localizer 6–107
- Fuel
  - Flow 6–2
  - Menu 6–2
  - Setting 6–2
  - Totalizer 3–78
- Function
  - Bug 6–67
  - Button/Menu 5–1
  - Clear Strikes 3–110
  - CREATE USER WPT 6–29
  - DCLTR 6–63
  - Declutter Display 6–88
  - Direct-To 3–137
  - FLTA 9–17
  - Inhibit 9–35
  - Moving Map 6–87
  - Nearest 3–137
  - Omnibearing Selector 6–59
  - Premature Descent Alert 9–24
  - TAWS 9–1, 9–12
  - Terrain Display 9–13
  - VNAV 6–76

**G**

Gear 9–13  
Glide Area  
    See Dead-Stick Glide Area 3–97  
Glideslope 3–36, 8–27  
    Indicator 3–83  
GPS 2–3, 2–40, 3–152  
    Failure 2–46, 3–152, 3–154  
    Guidance 9–7  
    Loss 3–147, 3–149  
    Warning 2–16

GPS/WAAS 2–40

GPWS 9–31

Ground Track 3–3, 3–78, 3–101  
    Lubber Line 3–101

Groundspeed 3–79, 3–100, 3–135, 3–140

GS 3–148

Guidance  
    Course 8–9

**H**

HDG 6–86

Heading 3–103  
    Bug 3–26, 3–79, 3–102  
    Errors 3–148  
    Indicator 3–27, 3–78  
    Pointer 3–103

Heading Indicator 3–3

Heading-up 3–39, 6–86  
    Centered Mode 3–82

HFOF 2–9

Highway-In-The-Sky 1–1, 3–48

HIRF 2–37

HITS 3–36, 3–48

Holding Pattern 2–42, 3–10, 3–104, 8–34

Holding pattern 8–16

Horizon 3–3, 3–9

Actual 3–27

Artificial 3–27

Cue 3–6, 3–29

HSI 3–30

Changing Source 3–132

Format 3–132

Source 6–63, 6–107

Source Selection 6–59

HTAWS 3–129, 9–12, 9–31, 9–37

HUL 2–9

**I**

Identifiers

    Duplicate 9–47

IDU 2–1, 2–9

IFR

    Procedures 1–6, 8–1

IFR Airport 3–103

ILS 3–36

    Needle Chasing 8–6

    Receiver 9–30

    Signal 3–127

    Tracking 3–37

IM 2–9

Indicator

    Mode/Rate 3–84

    Pitch Limit 3–6, 3–45

    Slip 2–29, 3–61

    To-From 3–83, 3–132

Initial Point 8–25

Insert 6–41

    Data Card 2–33, 6–39

Instructor 1–4, 7–4

Instrument

    Primary Flight 9–2

Instrument Approach

    On PFD 3–4

Intercept

    Final Approach 6–108

- Interface
  - Analog 6–106
- Interference
  - Electromagnetic 2–37
  - Radio 2–37
- ISA temperature 3–79
  
- J
- Jeppesen 2–32, 8–9, 8–10, 9–38
  - Approach Charts 9–49
- Jet Routes 3–106
  
- K
- KIAS 6–75
- KTAS 2–9
  
- L
- Landing 3–15, 9–13
  - Configuration 9–26
  - Gear 9–27, 9–30
  - Power Off 3–97
  - System 2–40
- LAT/LON
  - Show/Hide 6–82
- Latitude 3–80
  - Current 6–82
- LCD 2–1
- Leg
  - Active 8–18
- Level-off 3–54, 9–19
- Lightning
  - Dedicated Display 3–109, 3–120
  - Display 3–88
  - Strikes 3–88, 3–106, 3–108, 3–109
- LNAV 3–49
- LNAV menu function 3–4
- Localizer 3–36, 6–50, 6–109, 8–27
- Log
  - Navigation 3–80
  - Longitude 3–80
    - Current 6–82
  - LRU 2–10
  - Lubber Line 3–78, 3–101
  
- M
- Mach Indicator 3–37
- Magnetic Heading Data 3–153
- MAP 2–10, 6–55
- Map
  - Scale Range 3–117
- Marker 3–21
  - Beacon 2–43, 3–38
  - Flight Path 3–3, 3–23
  - Flight Path and GPS 3–149
- Markings
  - Boundaries 3–91
  - MOA's 3–91
  - Warning 3–91
- MASPS 2–10
- Master Caution System 2–28
- MAWP 2–10
- MDA 2–10, 6–71
- Mechanical 2–37
- MEMS 2–10
- Menu 5–1, 5–2, 8–18
  - ACTV 6–56
  - BUGS 6–50
  - Bugs 2–30
  - Button 2–30
  - Cont 8–16
  - Declutter 9–36
  - Delete 6–25
  - Faults 2–41
  - Format 8–9
  - Functions 1–5
  - INFO 6–32, 8–17, 8–22
  - Insert 6–24

- MIN ALT 6-71, 6-72
- PFD Top Level 5-3
- Timer 6-64, 6-65, 6-66
- Messages
  - Display 9-4
- MFD 2-1, 2-31, 2-41
  - Caution Flags 2-46
  - Change Display 6-81
  - Flight Plans 6-3
  - Lightning 6-87
- Mini-Map 3-39
- Missed 8-12
  - Approach 3-104, 3-107, 9-27
- Mode
  - Annunciators 3-108
  - Approach 8-26, 9-7, 9-18, 9-21
  - Departure 9-18, 9-21
  - Enroute 9-18, 9-21
  - Failure 3-142
  - Navigation 9-7
  - Strike or Cell 6-92
  - Terminal 8-23, 8-26, 9-18, 9-21
  - Zoom 9-10
- Moving Map 3-78, 8-7
  - Change 6-87
  - Change Format 6-85
  - Declutter 6-88
  - Instrument Approach 3-79
  - Lat/Lon 6-82
  - Scale 6-84
  - Show/Hide 6-81, 6-82
  - STAR 3-80
  - Strikes 6-84
- Mute, EFIS 2-16, 9-6
  
- N
- N UP 6-86
- Names 9-43
  
- NAV Log page 6-94
- NavData Chart 9-38
- Navigation 2-40
  - Auto Declutter 6-89
  - Data Base 9-39
  - Log 3-113
  - Pilot 8-38
- ND 2-1
- NDB 3-7, 3-105, 3-114
- Nearest 3-9, 6-41
  - Runway 7-2
- North-Up 6-86, 8-9
- NOTAMs 9-40
  
- O
- OAT 3-115, 3-135
  - Sensor 3-150
- OBS 2-10, 3-9, 3-109
  - Automatic 6-61
  - Changing HSI Source 3-118
  - Final Approach 6-107
  - Manual 6-62
  - Mode Setting 3-118
  - Setting 3-83
- Obstacle
  - Data 9-34
- Obstruction 3-41, 3-114, 9-16
- Offset
  - Distance 6-58
- Operation
  - Normal 9-4
- Order
  - FLTA NAV Mode 9-18
- Overflying 8-1
  
- P
- Path
  - Projected 3-116
- Pattern

- Holding 3–50
- PDA 3–125
- PFD 2–1
  - Basic 3–3
  - Declutter 6–89
  - Field of View 3–80
  - On Instrument Approach 3–4
  - Zoom 6–90

- Pitch 3–27

- Scale 3–3

- Pitch Scale 3–45

- Planning 9–9

- Pop-Up 3–64

- Automatic 9–23

- Power

- Off 6–40

- Up 9–4

- Problems

- Operational 1–8

- Procedure

- Abnormal 9–1

- Arming 6–55

- Arrival 6–106

- Departure 6–106, 8–37

- Emergency 7–1, 9–1

- Enroute 6–106

- Multiple Approach 9–49

- Normal 9–4

- Step-by-Step 1–5, 6–1

- Turn 8–16

- PTR 3–83

- R

- Radar

- Vectors 6–41

- Radio 6–105

- Tuning 6–17, 6–39, 6–105

- VHF 6–63

- Range

- Ring 3–117

- Ring Scale 3–117

- Range Ring 3–80

- Receiver

- GPS/WAAS 9–29

- Remove 8–18

- Report

- Service Difficulty 9–54

- RNAV 2–11

- Route

- Off 6–92, 6–95

- On 6–92, 6–95

- Recenter 6–20

- Standard Terminal Arrival 8–41

- Runway 8–5, 8–39

- In use 8–17

- Runways 3–46

- S

- Satellite

- Poor geometry 3–140

- Scale

- Bank Angle 3–13

- CDI 3–16, 6–50

- Directional 3–3, 3–78, 3–99, 7–3

- Range Ring 3–79

- Transition 8–17

- Scan

- Instrument 9–11

- SCC 2–37

- Self Test 9–4

- Sensor

- Gear Position 9–30

- Sensors

- External 9–29

- Sequence

- Approach 8–23

- Signal

- Input 2–43

- Radar Altimeter Altitude 2-43
- VOR 2-43
- Sink Rate 3-126, 9-12, 9-27
- Skyway 3-48, 6-60
  - Boxes 3-48, 8-8, 8-18
  - Finding 3-96
  - Flying 3-58, 3-60
  - GPS 3-37, 3-48
  - Lateral Navigation 3-49
  - Turns 3-51
  - Vertical Navigation 3-52
  - VFR 6-45
- Slip Indicator 3-3
- SmartMedia 2-33
- Software Limits 9-39
- Speed
  - High 9-28
  - Low 9-28
- Speed Trend Worm 3-6
- STARs 2-42, 8-41
- Start Point 3-119
- Stormscope 3-84, 6-92
- Strik
  - Position Reference 3-120
- Strike
  - Mode 6-92
  - Position 3-84
  - Test 6-93
- STRK TEST 6-93
- SUSPEND 8-12
- Switch
  - Audio Cancel 9-31
  - Glideslope Deactivate 9-31
- SYMB DCLTR 6-88
- Symbology 3-1, 4-1
  - Auto Declutter 6-89
  - Declutter 6-88
  - Navigation Declutter 6-88
  - Navigation Display 3-77
  - PFD 3-2
- System
  - Configuration 2-3
  - Overview 1-4, 2-1
- T
- TACAN 3-137
- Target
  - Airspeed 3-62
  - Altitude Bug 6-69
- TAWS 2-2, 2-11, 3-65, 3-123, 9-19
  - Basic Parameter 9-32
  - INHIBIT 3-129
  - Inhibit 3-66, 3-129, 9-35
  - Inhibit Annunciator 9-5
  - Inhibit Switch 9-36
  - Rotorcraft 3-129
  - Warning 9-14
- Teardrop 8-16
- Temperature
  - Outside Air 3-79, 3-115
- TERPS 2-12
- Terrain 3-63, 3-78
  - Atmospheric Perspective 3-63
  - Caution 3-130
  - Clearance 9-9
  - Database Boundaries 9-33
  - Display 3-67
  - Display Function 9-17
  - Excessive Closure Rate 9-26
  - Mode 3-108, 3-109
  - Non-Threatening 3-122
  - Not Landing 9-27
  - Threatening 3-123
- Threshold
  - Warning 9-29
- Timer 3-68
  - Count Up 6-64
  - Flight 6-66
  - Off 6-66

- Tips 9–9
- Track 3–140, 3–148
- Traffic 3–69, 3–79, 3–133
  - Display 3–77, 6–95
  - Mode 3–108
  - Position Reference 3–135
  - Test 6–95, 6–100
- Transition 8–5, 8–22, 8–39
  - CDI 8–24
  - List 6–49, 6–53
  - System 8–26
  - Vectors-To-Final 8–1
  - Vectors-to-Final 8–26
- Tune 6–109, 9–10
- Tutorial 7–1
  - Quick Start 1–6
- U**
- Unusual
  - Attitude 3–19
- Update
  - Database 2–36
- Updates 2–32, 2–34
- User Waypoint 3–7
- V**
- Vectors 6–108, 8–38
  - ATC 8–22, 8–26
  - To Final 8–25
- Vectors-To-Final 6–44, 8–5
- Vertical Navigation 6–76
- Vertical Speed 6–73
- Vertical speed bug 6–69
- Vertical speed bugs 6–73
- VFR 3–7, 6–44
  - Airport 3–80
- Victor Airways 3–137
- VNAV 6–76
  - Change Angles 6–76
  - Climb Angle 3–54
  - Manual 6–77
  - Overrides 3–58
- VOR 3–7, 3–137
- VOR OBS -- HSI 6–63
- VOR-DME 3–137
- VORTAC 3–80, 3–137
- VPROC 3–50
- VSI 3–73
  - Maximum Value 3–73
- V-Speed 3–73
  - Set 6–75
- W**
- WAAS 3–9
  - HLTH 2–42
- WAAS GPS 3–16
- Wake-Up 9–29
- Warning 2–16, 3–17, 3–124, 3–133, 9–16
  - Excessive Descent Rate 3–125
  - Obstructions 3–115
  - PDA 3–125
  - TAWS 9–5
  - Threshold 9–25
  - Voice 2–16, 2–46, 3–133, 6–70
- Warranty
  - Information 9–1
- Water 9–15
  - Damage 2–38
- Waterline 3–3, 3–6, 3–11, 3–19, 3–21, 3–23, 3–76, 3–145
  - Expanded 3–6
- Waypoint 3–9, 3–14, 3–78
  - Activate 6–21
  - Active 3–3
  - Active Information 3–3, 3–7
  - Active Route 6–38
  - Active Symbol 3–3

- Airport 9-48
- Airport-Related 9-49
- Approach Bearing 6-30
- Asterisk 6-21
- Automatic Sequencing 8-20
- Bearing To 3-3, 3-78, 3-93
- Bearing/Distance 9-50
- Create 6-28
- Delete 6-9
- Delete User 6-35
- Differences 9-39
- Direct-To 6-17, 6-18, 8-22, 8-25
- Display 3-137
- Distance Entry 6-33
- Edit User 6-33, 6-34
- Elevation 6-30
- Fly-By 3-79
- Fly-Over 3-79
- IAF 8-22
- Identifier 6-20, 6-32, 9-41
- Info 6-10
- Insert 6-9, 6-23
- Latitude 6-30
- Longitude 6-30
- Magnetic Variation 6-30
- NavData 6-37
- Navigation 3-7
- Nearby 6-37
- Obscured 3-64
- Overfly 6-33
- Override 6-19
- Phantom 6-18
- Radial & Distance 6-30
- Radial Entry 6-33
- RNAV 9-42
- Sequence 8-23
- Sequencing 3-93, 3-94, 3-105, 3-107, 3-108, 3-109, 3-137, 8-12
- Start 3-80
- Terminal 9-48
- Transfer 6-39
- Weather
  - Display 3-77
- Wind 3-23, 3-145, 3-148
  - Atmospheric Changes 3-141
  - Changes 3-149
  - Data 3-79, 3-140
  - Vector 3-78, 3-141
  - Zero 3-50
- WSI Datalink 6-100
- WX-500 3-106, 3-110
- Z
- Zone
  - Touchdown 7-2
- Zoom 9-10
  - PFD 6-90
- Zulu
  - Time 3-141

